




LoRa Remote I/O

UC1152 User Guide

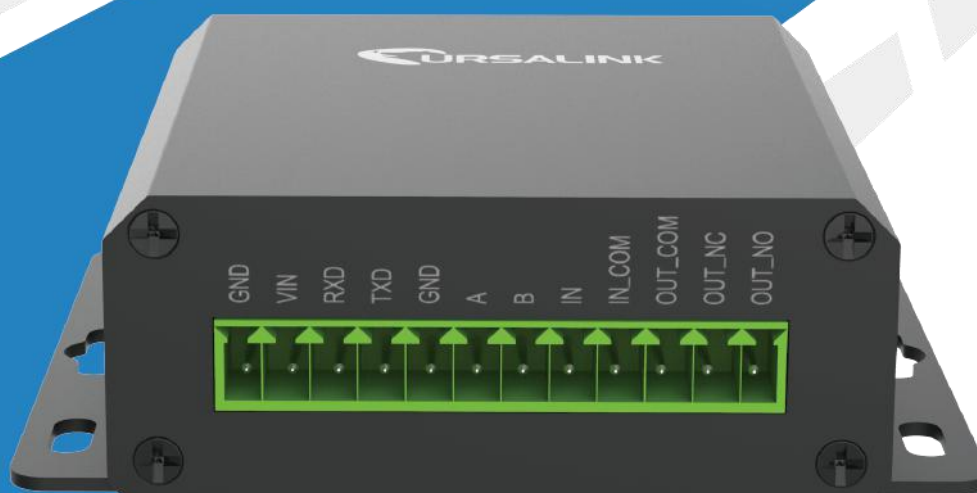

Contents

1. Preface.....	3
2. Introduction.....	3
2.1 Features.....	3
2.2 Parameters.....	4
2.3 LED Indicator Description.....	4
3. Installation.....	5
3.1 Environment.....	5
3.2 Power Supply.....	5
3.3 Micro USB Port.....	6
3.4 Terminal Description.....	6
3.5 Digital Input.....	7
3.6 Relay Output.....	7
4. Configuration.....	8
4.1 Configuration via PC.....	8
4.1.1 Serial Port Settings.....	9
4.2 Status.....	10
4.3 General.....	11
4.3.1 Basic.....	11
4.3.2 RS485.....	12
4.2.3 RS232.....	13
4.4 LoRaWAN.....	14
4.4.1 Basic.....	14
4.4.2 Channel.....	16
4.4.3 Advanced.....	17
4.5 Channel.....	19
4.6 Command.....	20
4.6.1 Read Command from Device.....	21
4.6.2 Open a Command File.....	21
4.6.3 Save the Command to Device.....	21
4.6.4 Save the Command as File.....	21
4.7 IF-THEN Behaviour Command.....	21
4.7.1 Supported IF Condition.....	21
4.7.2 Supported THEN Actions.....	24
4.8 Upgrade.....	26
5. Application Examples.....	26
5.1 Periodic Status Report.....	26
5.2 Control Appliances.....	27
5.2.1 Send an Alert When Channel Value Exceeds a Certain Threshold.....	27

1. Preface

Thank you for choosing Ursalink UC1152 LoRa Remote I/O. This user guide will present in detail all the functions and features of the product. Ursalink UC1152 is designed for both industrial and commercial applications. The product should be used under the guidance of this user guide, referring to parameters and technical specifications. The UC1152 is a compact, high-performance device that offers LoRaWAN connectivity for remote access and easy management of machines and equipment over the cellular network.

We bear no liability for property loss or physically injury arising from abnormal or incorrect usage of this product.

2. Introduction

Ursalink UC1152 is designed as a cost-effective industrial machine monitoring device that monitors and controls up to 1 RS485, 1 RS232, 1 DC signal and 1 drivable relay output.

With the aid of Ursalink UC1152, the alarm condition brings attention to engineering personnel immediately. The output can be connected with an alarm indication device, such as a light or horn.

The module can give immediate response to the status of both the input and output conditions. A LoRa module is embedded in the Ursalink UC1152 .

This user guide is intended to provide detailed technical specifications and explanations to the basic user as well as the technically-minded groups. It is a live document, and will be updated from time to time. Please ensure that you have the latest version, by checking our website at: <https://www.ursalink.com/en/documents-download/>

2.1 Features

- 1 relay drivable output
- 1 digital input connected with 1 DC signal
- Offer serial interface with 1 RS232 and 1 RS485
- Collects data from Modbus slave device
- Integrate legacy serial and I/O devices into cloud
- Customizable conditions & programmable actions
- Send uplink alert messages according to user-defined conditions
- Automatic switching of field devices at set times
- Comply with the LoRaWAN Class C protocol
- Support star network and mesh network
- High Rx sensitivity and adjustable Tx power

2.2 Parameters

Parameter Item	Reference Scope
Antenna	50 Ω SMA Antenna Interface
Frequency Band	EU 433, CN 470-510, EU 863-870, US 902-928, AU 915-928, KR 920-923
Sensitivity	-147 dBm @300bps
Output Power	20dBm
Protocol	LoRaWAN Class C
RS485	Baud rate: 2400-115200bps Data bits: 7/8 Parity bits: N/E/O Stop bits: 1/2
RS232	Baud rate: 4800-115200bps Data bits: 7/8 Parity bits: N/E/O Stop bits: 1/2
Digital Input	Opto-isolated depending on voltage Can accept any DC signals of any type,including: ➤ Dry Contacts ➤ DC Voltage (3 - 20V) High Voltage: +3V ~ +24V Low Voltage: +1V max
Digital Output	1 x SPDT Relay Contact Rating: Maximum Load Current: 250VAC/30VDC@3A
Connector type	Screw Terminals
DC Power Supply	5-24 VDC
Operating Temperature	-40° C to +70° C (-40° F to +158° F)
Relative Humidity	0% to 95% (non- condensing)
Dimensions	79 x 60 x 24 mm

2.3 LED Indicator Description

System:

Solid On: System booting
On for 500ms, off for 500ms: Working properly
On for 100ms, off for 100ms: Failed to send data

ACT:

Off: Failed to join network
On for 75ms, off for 3000ms: Joined the network successfully
On for 500ms, off for 500ms: Sending/Receiving data

3. Installation


3.1 Environment

Due to the product properties of Ursalink UC1152, we **STRONGLY** advise that it should not be installed in proximity to a variable speed drive or with any other electrically noisy equipment. **DO NOT** install the Ursalink UC1152 into a metal enclosure unless an antenna is mounted on the outside of the enclosure.

3.2 Power Supply

The Ursalink UC1152 features a 2 pin 3.5mm terminal block where a power supply can be connected. The power supply should have the following specifications:

- Output Voltage: 12V nominal
- Output Current: 0.5A
- Installation:

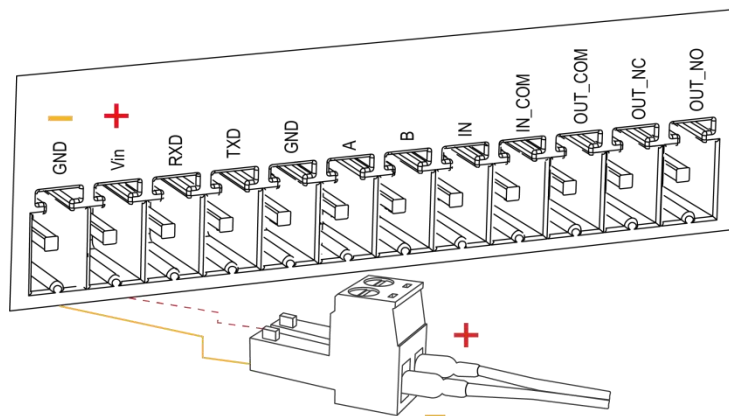

A suitable power supply comes with the retail product.


For industrial applications, it is advised that the Ursalink UC1152 should be installed into its own metal housing and be powered from a separate power supply (as opposed to sharing one with other equipment).

Please Note: While the Ursalink UC1152 has fairly rugged internal power supply circuitry, no special provision for lightning protection is well in place. If the Ursalink UC1152 is used in an area where thunderstorm is about to occur, it is advisable to use a commercially available lightning suppressor (the same applies to inputs or outputs that are connected to wires longer than 2 or 3 meters). The guarantee does not cover damage resulting from lightning strikes! The Ursalink UC1152 can operate reliably from voltages in the range of 5 to 24 VDC.

3.3 Micro USB Port

The Ursalink UC1152 provides a micro USB port to connect to a PC via USB cable, which allows the PC to configure the unit.

3.4 Terminal Description

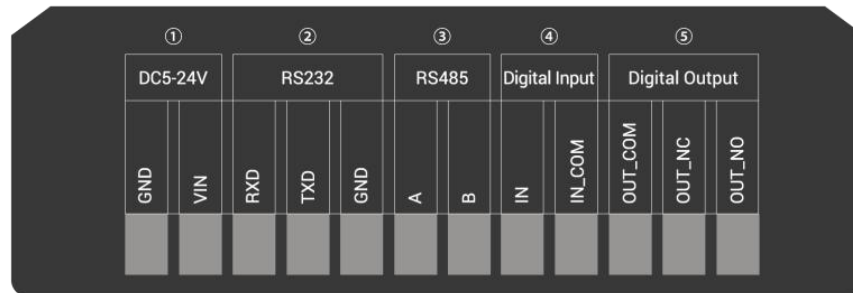

① [DC 5-24V]

Terminal	Description
VIN	Positive terminal of the DC power supply (+)
GND	Negative terminal of the DC power supply (-)

② [RS232]

Terminal	Description
RXD	Receive Data
TXD	Transmit Data
GND	Ground

③ [RS485]

Terminal	Description
A	Data +
B	Data -

④ [Digital Input]


Opto-isolated depending on voltage DC Voltage (3-24V)

⑤ [Digital Output]

Driving relay to connect NC or NO

3.5 Digital Input


- When the input is triggered either as high or low, the Ursalink UC1152 will take action if you have pre-configured related command.
- Terminal "IN" is internally pulled high. Leaving the connection open or connecting it to "0 -1 V" will indicate an "Input-De-activate" state.
- When terminal "IN" is connected to "3-24 V", it will indicate an "Input-Activate" state.
- Trigger voltage: Minimum = 3 VDC, Maximum = 24 VDC.

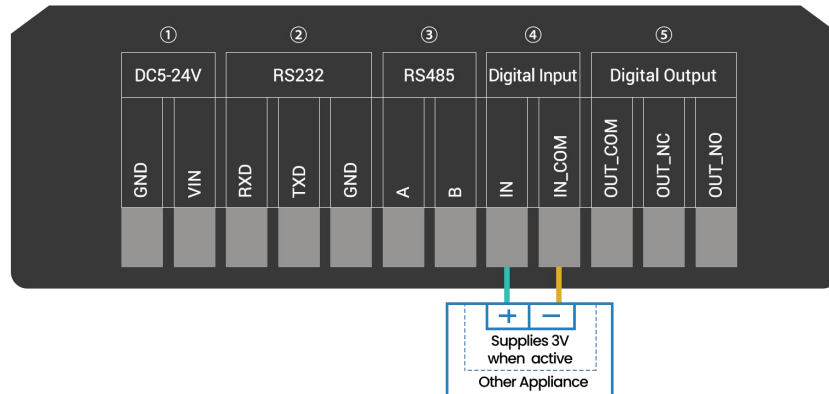

3.6 Relay Output

- The output is used for switch circuits ON & OFF and can be controlled by command message
- The output terminals are internally connected to a 3 Amp SPDT relay
- OUT_NC = Normally Closed
- OUT_COM = Common
- OUT_NO = Normally Open

Maximum Current	3 Amp
Maximum Voltage	250VAC, 30VDC

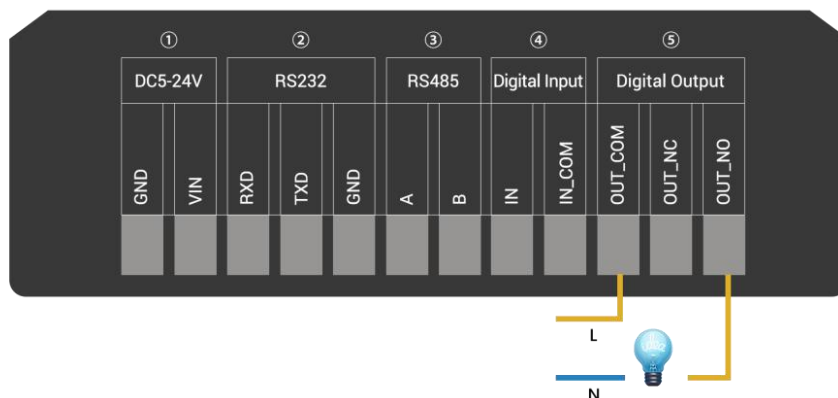

4. Configuration

4.1 Configuration via PC

Follow these steps:

Step 1:


Connect the Ursalink UC1152 to PC via micro USB port.

Step 2:

Power on the Ursalink UC1152.


Step 3:

Run the Ursalink ToolBox.

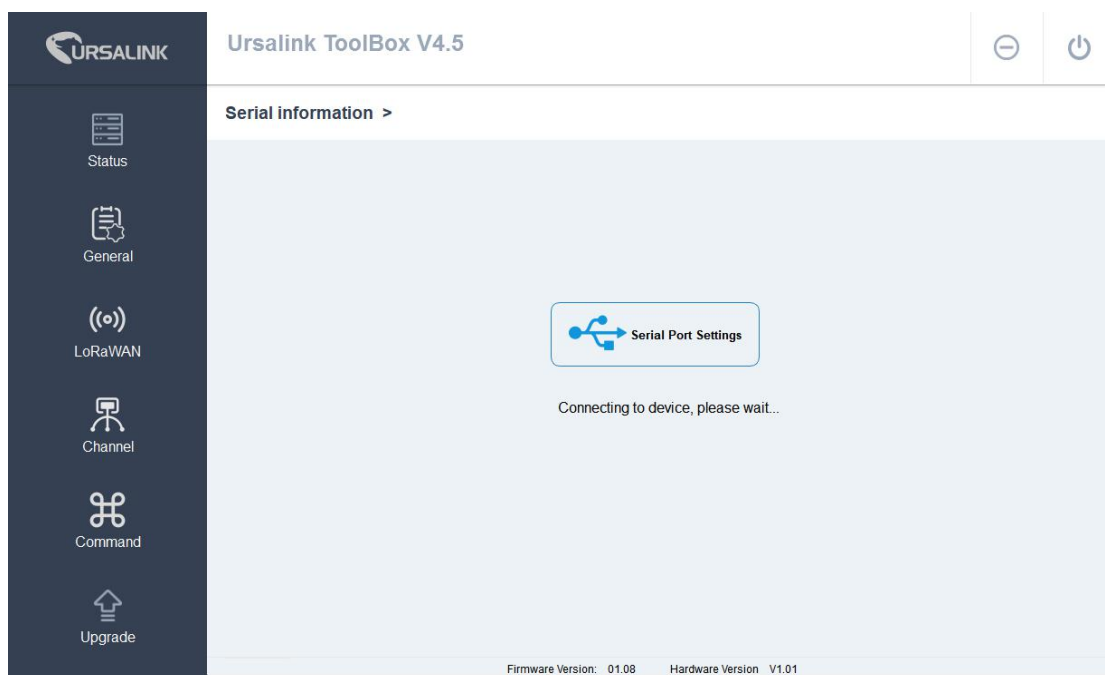

The software will display this interface when getting started. Here you can create a new setup, import an existing setup from your PC, or retrieve the current setup from the Ursalink UC1152.

4.1.1 Serial Port Settings

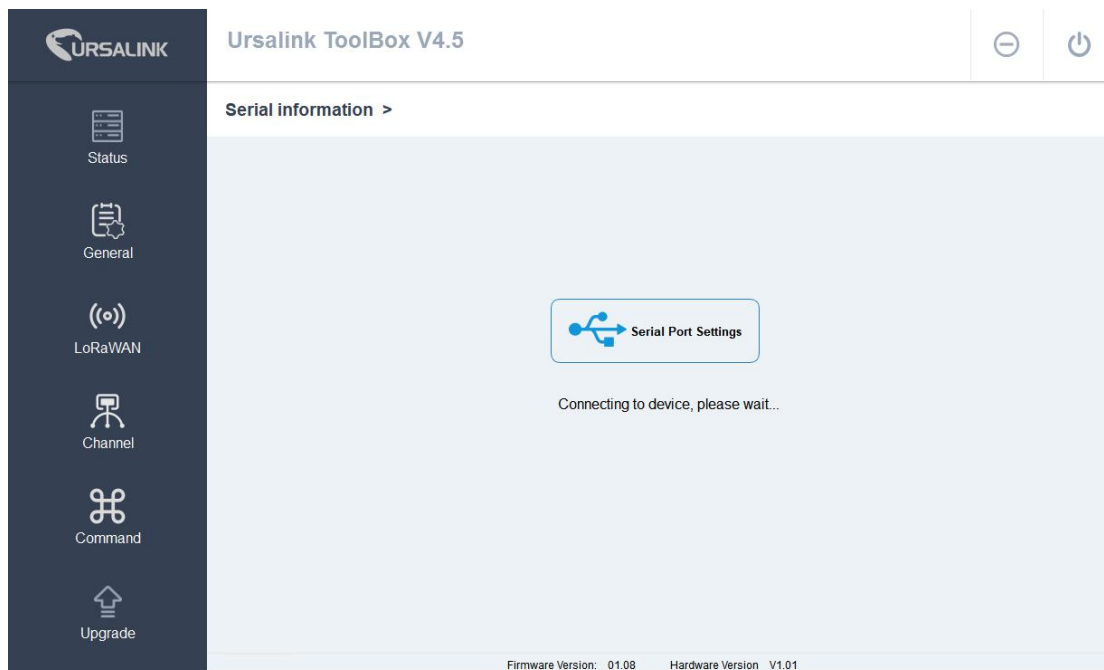

When the Ursalink ToolBox displays: **Connecting to device, please wait...**

You can click **Serial Port Settings** to set the correct serial port parameters.

The screenshot shows a 'Serial Port Settings' dialog box with a blue header and a close button (X). The settings are as follows:

Parameter	Value
Serial port	COM3
Login password	●●●●●●●●
Baud rate	115200
Data bits	8
Parity bits	None
Stop bits	1

At the bottom of the dialog are two buttons: 'Save' and 'Cancel'.

Serial Port Settings		
Item	Description	Default
Serial Port	Select the serial port for data transmission.	Null
Login Password	Enter the login password.	123456
Baud Rate	Select from "9600", "57600", "115200".	115200
Data Bits	Select from "5", "7", "8".	8
Parity Bits	Select from "Even", "Odd", "None".	None
Stop Bits	Select from "1", "2".	1

If both the serial port parameters and the login password are correct, it will display: Serial port is connected.



4.2 Status

Click "Status" to see the basic status information of this device:

 A screenshot of the Ursalink ToolBox V4.5 software interface. On the left is a dark sidebar with icons and labels for "Status", "General", "LoRaWAN", "Channel", "Command", and "Upgrade". The main area is titled "Status >" and displays the following information:

Model:	UC1152
Serial Number:	611312345670
Partnumber:	EU868-0080
Firmware Version:	01.08
Hardware Version:	V1.01
Local Time:	2019-2-14 13:14:52 Monday
Join Status:	Activate
RSSI/SNR:	0/0
Channel:	2
Datarate:	2-SF10
Rx2DR:	0-SF12
Channel Name	Tem,Hum
Input:	Low
Output:	High
Uplink Frame-counter:	0
Downlink Frame-counter:	0


 At the bottom of the main area, it shows "Firmware Version: 01.08" and "Hardware Version: V1.01".

Status	
Item	Description
Local Time	Show the time of the device.
Join Status	Show if the device joined the network successfully. The "Activate" means the device has joined the network.
RSSI/SNR	Show the RSSI/SNR of received packet.
Channel	Show the the channel currently used by the device to send packets.
Rx2DR	Show the RX2 datarate which used for the RX2 receive-window.
Channel	Show the name of the channel that users have created.
Input	Show the status of Digital Input.
Output	Show the status of Digital Output.
Uplink Frame-counter	The number of data frames sent uplink from UC1152 to the network server.
Downlink Frame-counter	The number of data frames sent downlink from the network server to UC1152.

4.3 General

Click "General" to set the general settings of the device

4.3.1 Basic

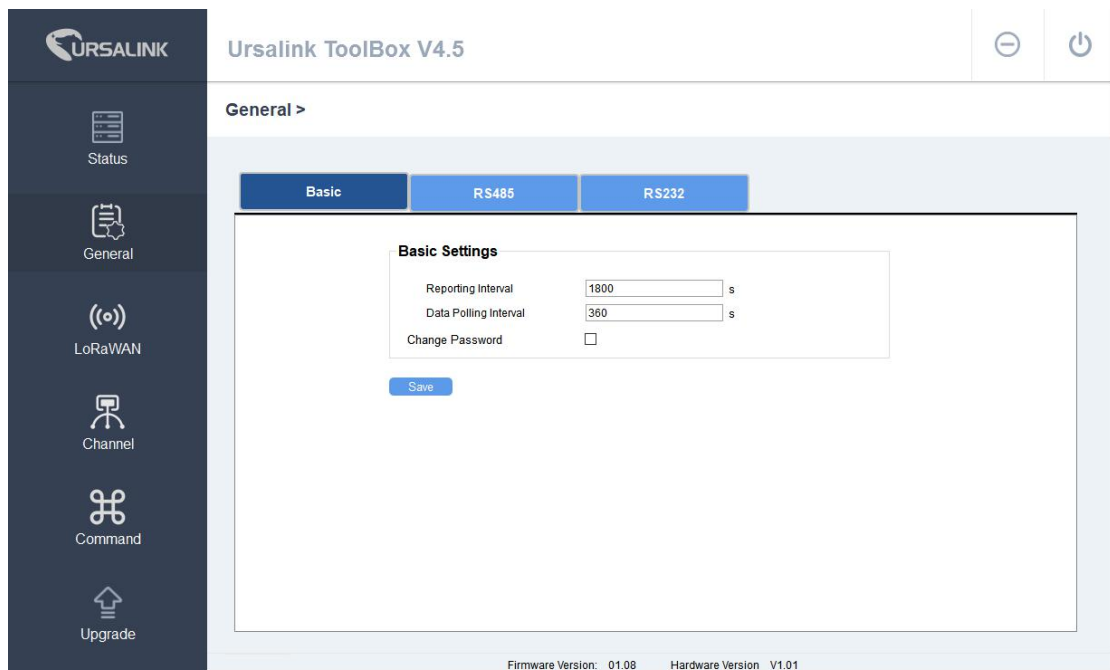

Basic Setting		
Item	Description	Default
Reporting Interval	Set the regular report interval. The device will send the I/O status/value and signal strength to the user-built server regularly. The interval range is 1-3600 seconds.	1800
Data Polling Interval	The interval of reading data from analog input.	1
Change Password	Click to change password.	Null
Old Password	Enter the old password.	Null
New Password	Enter the new password.	Null
Confirm Password	Enter the new password again.	Null

4.3.2 RS485

Ursalink ToolBox V4.28

General >

Basic RS485 RS232

Enable ☒

Baud Rate 115200

Data Bit 8 bits

Stop Bit 1 bits

Parity None

Modbus RS485 bridge LoRaWAN ☒

Port 14


Save

Firmware Version: 02.03 Hardware Version V2.0

485 Settings		
Item	Description	Default
Enable	Enable/disable RS485.	Enable
Baud Rate	Select from "2400", "4800", "9600", "19200", "38400", "57600", "115200".	9600
Data Bits	Select from "5", "7", "8".	8
Stop Bits	Select from "1", "2".	1
Parity Bits	Select from "Even", "Odd", "None".	None
Modbus RS485	Enable this mode to collect data from	Disable

bridge LoRaWAN	slave devices and then send it to Network Server via LoRaWAN. This mode also has the capability to change the behaviour of the ModBus device by writing into its registers.	
Port	Enter the LoRaWAN frame port for transparent transmission between UC11-N1 and Network Server. Range: 2-84,86-223.	Null

4.2.3 RS232

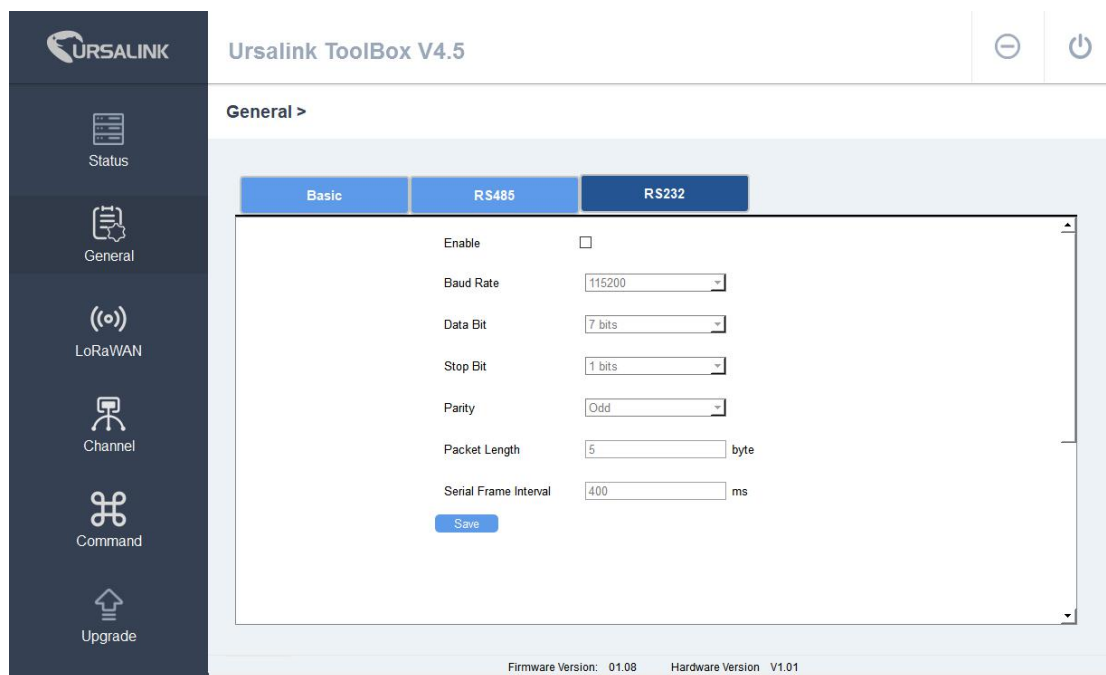

232 Settings_TCP

Item	Description	Default
Enable	Enable/disable RS232.	Disabled
Baud Rate	Select from "4800", "9600", "19200", "38400", "57600", "115200".	115200
Data Bits	Select from "7", "8".	7
Stop Bits	Select from "1", "2".	1
Parity Bits	Select from "Even", "Odd", "None".	None
Packet Length(Bytes)	Set the length of the serial data frame. Packet will be sent out when preset frame length is reached. The range is 1-1024, the unit is byte.	256
Serial Frame Interval(ms)	The interval that the device sends out real serial data stored in the buffer area to public network. The range is 10-65535 milliseconds.	100

	Note: data will be sent out to public network when real serial data size reaches the preset packet size, even though it's within the serial frame interval.	
--	---	--

4.4 LoRaWAN

4.4.1 Basic

Ursalink ToolBox V4.5

LoRaWAN >

Basic | Channel | Advanced

Device EUI: 1152612291311118

App EUI: 557240as896e6123

Application Port: 55

RS232 Port: 12

Join Type: OTAA

Application Key: 5572404c696e6b4c6f52613230312222


Datarate: 5-SF7

Save


Firmware Version: 01.08 | Hardware Version V1.01

Basic Settings		
Item	Description	Default
Device EUI	Enter the identifier of the gateway.	Model + SN
App EUI	An AppEUI that will be attached to received packets and a Join EUI.	5572404c696e6b4c6f52613230313823
Application Port	The port used by the device to send and receive data.	55
Join Type	Select from: "OTAA" and "ABP". OTAA: Over-the-Air Activation. For over-the-air activation, end-devices must follow a join procedure prior to participating in data exchanges with the network server. An end-device has to go through a new join	OTAA

	<p>procedure every time it has lost the session context information.</p> <p>ABP: Activation by Personalization.</p> <p>Under certain circumstances, end-devices can be activated by personalization. Activation by personalization directly ties an end-device to a specific network by-passing the join request - join accept procedure.</p>	
Datarate	The datarate is used to transmit packet.	2-SF10
Regular Report Interval	The interval of sending data to the gateway.	720min

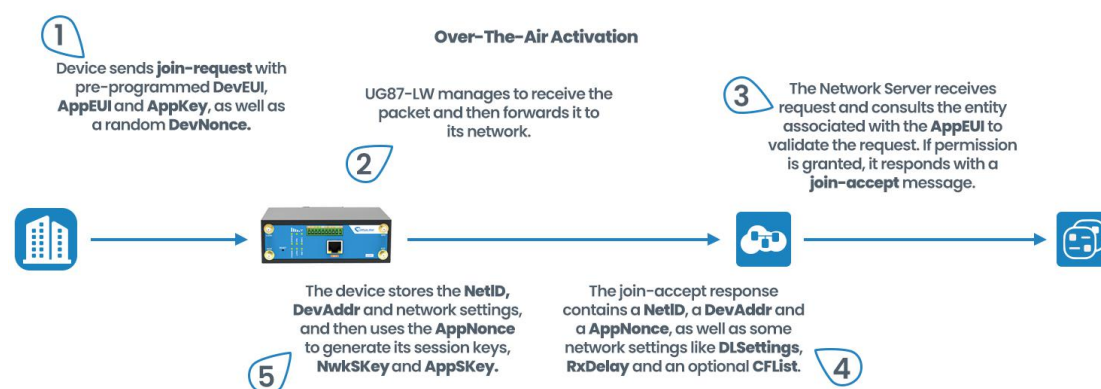

OTAA Settings		
Item	Description	Default
Application Key	Enter the application key. Whenever an end-device joins a network via over-the-air activation, the application key is used for derive the Application Session key.	5572404c696e6b4c 6f52613230313823

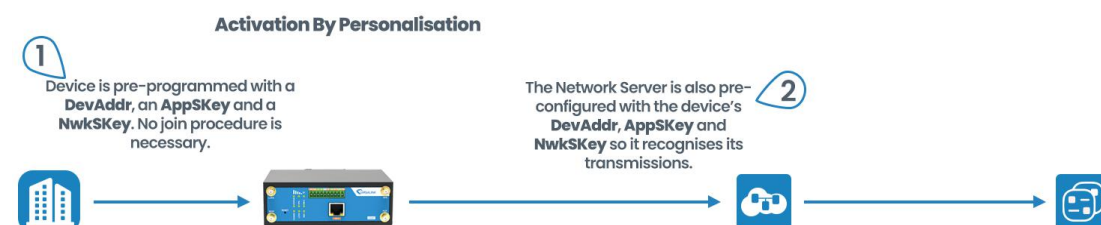

ABP Settings		
Item	Description	Default
Network ID	Network identifier (NwkID) is used to separate addresses of territorially overlapping networks of different network operators and to remedy roaming issues.	0x010203

Device Address	Enter the device address. The device address identifies the end-device within the current network.	The last 8 digits number of SN
Network Session Key	Enter the network session key of the device. The network session key specific for the end-device. It is used by the end-device to calculate the MIC or part of the MIC (message integrity code) of all uplink data messages to ensure data integrity.	5572404c696e 6b4c6f5261323 0313823
Application Session Key	Enter the application session key of the device. The AppSKey is an application session key specific for the end-device. It is used by both the application server and the end-device to encrypt and decrypt the payload field of application-specific data messages.	5572404c696e 6b4c6f5261323 0313823

4.4.2 Channel

On this page, you can view all the supported LoRa frequencies and setup the channel frequency used for receiving and sending data.

LoRaWAN >

<input type="checkbox"/>	Index	Frequency/MHz	Max Datarate	Min Datarate
<input type="checkbox"/>	0	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	1	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	2	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	3	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	4	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	5	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	6	0	5-SF7BW125	0-SF12BW125

Note: Make sure that you have configured the corresponding channel on the gateway.
E.g. If you have configured a 923.2 MHz channel on UC1152, then you have to configure a 923.2 MHz channel on gateway as well.

Multi Channels Setting

Enable	Index	Radio	Frequency/MHz
<input checked="" type="checkbox"/>	0	Radio 0	923.2
<input checked="" type="checkbox"/>	1	Radio 0	923.4
<input checked="" type="checkbox"/>	2	Radio 0	923.6
<input checked="" type="checkbox"/>	3	Radio 1	922.2
<input checked="" type="checkbox"/>	4	Radio 1	922.4
<input checked="" type="checkbox"/>	5	Radio 1	922.6
<input checked="" type="checkbox"/>	6	Radio 1	922.8
<input checked="" type="checkbox"/>	7	Radio 1	923.0

4.4.3 Advanced

LoRaWAN >

Basic Channel Advanced

Confirm Mode ☐

ADR Mode ☐

TXPower db

Join Delay1 ms

Receive Delay1 ms

Receive Delay2 ms

Join Trials

ReTx

RX2 Datarate

RX2 Channel Frequency MHz

ACK Timeout ms

Duty Cycle Switch ☐

Duty Cycle %

Uplink Frame Counter

Advanced Settings


Item	Description	Default
Confirm Mode	<p>Disabled: UC1152 will send uplink unconfirmed packet.</p> <p>Enabled: The last packet sent from UC1152 to Network Server will be uplink confirmed packet.</p>	Disabled
ADR Mode	<p>ADR Mode: Adaptive Data Rate.</p> <p>Enabled: The Network Server will adjust the datarate by MAC command.</p> <p>Disabled: Whatever how the signal quality is, the Network Server will not adjust the datarate of</p>	Disabled

	UC1152.	
TXPower	The TX (transmit power) setting is used to control the transmission power of the device.	16
Join Delay1	Number of seconds before receive windows are opened for join.	Specified in the LoRaWAN™ Regional Parameters
Receive Delay1	The Join Accept Delay between the end of the Tx and the Join Rx Window 1.	Specified in the LoRaWAN™ Regional Parameters
Receive Delay2	The Join Accept Delay between the end of the Tx and the Join Rx Window 2.	Specified in the LoRaWAN™ Regional Parameters
Join Trials	The maximum number of the device to resend the join request when the device failed to join the network.	0
ReTx	The maximum number of the device to resend the data packet if no ACK is received after the specified time. (Must check Confirmed Mode)	3
RX2 Datarate	Datarate for second receive window, which must be the same with Tx Datarate of gateway.	2-SF10
RX2 Channel Frequency	The frequency for second receive window.	Specified in the LoRaWAN™ Regional Parameters
ACK Timeout	Time in milliseconds to wait for ACK before retry of confirmed downlink.	2000
Duty Cycle Switch	Check to enable Duty Cycle.	Enable
Duty Cycle	Number of minutes in sliding windows for duty cycle restrictions.	0. The 0 means using the standard Duty Cycle which is specified in the LoRaWAN™ Regional Parameters
Uplink Frame Counter	The number of data frames which sent uplink to the network server .It will be incremented by the end-d evice and received by the end-device.	0

	Users can reset the a personalized end-device manually, then the frame counters on the end-device and the frame counters on the network server for that end-device will be reset to 0.	
Downlink Frame Counter	<p>The number of data frames which received by the end-device downlink from the network server. It will be incremented by the network server.</p> <p>Users cloud reset the a personalized end-device manually, then the frame counters on the end-device and the frame counters on the network server for th at end-device will be reset to 0.</p>	0

4.5 Channel

On this page, you can add the channels to poll the remote Modbus Slave.



Status

General

LoRaWAN

Channel

Command

Upgrade

Ursalink ToolBox V4.28

Channel >

Execution Interval

50

ms

Max Resp Time

500

ms

Max Retry Times

3

Channel ID	Name	Slave ID	Address	Quantity	Type	Sign	Decimal Place	Value
1	1	1	0	1	Coil	<input type="checkbox"/>	0	<div>Fetch</div>
3	3	3	0	1	Holding Register(INT16)	<input checked="" type="checkbox"/>	0	<div>Fetch</div>

Save

Up to 8 channels



Success

Firmware Version: 02.03


Hardware Version V2.0

Channel Settings		
Item	Description	Default
Execution Interval(ms)	The execution interval between each command. Range: 10-1000. The default value is 50.	50
Max Resp Time(ms)	Set the maximum response time that the Ursalink UC1152 waits for the response to the command. If the device does not get a response after the maximum response time, it's determined that the command has timed out. Range: 10-1000.	500

Max Retry Times	Set the maximum retry times after it fails to read, range: 0-5.	3
Channel ID	Assign the channel for the slave device, 8 channels selectable.	Null
Name	Set the name to identify the remote channel. It cannot be blank.	Null
Slave ID	Set Modbus slave ID.	Null
Address	The starting address for reading.	Null
Quantity	The device will read 1 digit from starting address.	1
Type	Read command, options are "Coil", "Discrete", "Holding Register (INT16)", "Input Register (INT16)", "Holding Register (INT32)" and "Holding Register (Float)".	Holding Register (INT16)
Sign	To identify whether this channel is signed. Default: Unsigned.	Null
Decimal Place	Used to indicate the decimal place of the channel reading. For example: the channel value is 1234, and a Decimal Place is equal to 2, then the actual value is 12.34.	Null
Value	Show the data which read from this slave device.	Null
Fetch	Click to read the data from this slave device.	Null

You can click  to add a channel or click  to delete a channel.

4.6 Command

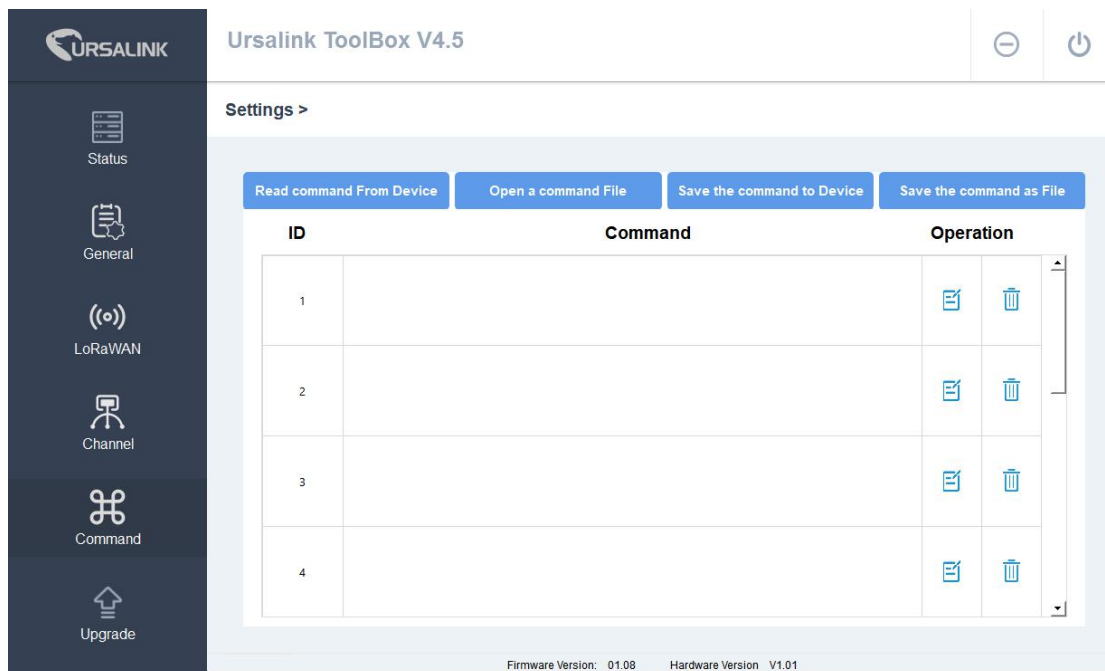

The screenshot shows the 'Ursalink ToolBox V4.5' interface. On the left is a dark sidebar with icons for Status, General, LoRaWAN, Channel, Command (selected), and Upgrade. The main area is titled 'Settings >' and contains four buttons: 'Read command From Device', 'Open a command File', 'Save the command to Device', and 'Save the command as File'. Below these buttons is a table with three columns: 'ID', 'Command', and 'Operation'. The table has four rows, each with an ID (1, 2, 3, 4), an empty 'Command' field, and two icons in the 'Operation' column (a document icon and a trash can icon). At the bottom of the interface, it displays 'Firmware Version: 01.08' and 'Hardware Version V1.01'.

4.6.1 Read Command from Device

Click "Command" to go to the configuration page. Ursalink ToolBox will read command from the connected device automatically. The whole process takes about 5 seconds.

4.6.2 Open a Command File

You can import the existing command file from your PC with following steps.

Step 1: Click "Open a Command File".

Step 2: Select the command file.

4.6.3 Save the Command to Device

You can click "Save the Command to Device" to save the command having been configured on the Ursalink ToolBox.

4.6.4 Save the Command as File

You can click "Save the Command as File" to save the command having been configured on the Ursalink ToolBox as a file and save it on your computer.

4.7 IF-THEN Behaviour Command

The Ursalink UC1152 is running with a number of defined behaviour commands. Each command takes the form of an IF-THEN statement pair. You are thus able to select certain trigger conditions to cause desired actions. The Ursalink UC1152 allows up to 8 separate behaviour commands with some models.

Users can select time or input constraints for any IF-THEN statement pairs, so that an action will only be triggered during certain period within a day, or only if certain input/output conditions are met.

The user can enter the edit page by clicking  , or delete the command by clicking .

4.7.1 Supported IF Condition

4.7.1.1 IF the Time Is ...

A command containing this IF condition will be triggered at a specific time every day within a

specified range of dates, or on every selected day of the week.

IF Time

The user can choose the day of the week from:

Monday
Every Day
Monday
Tuesday
Wednesday
Thursday
Friday
Saturday
Sunday

The user can also set the time from 00:00 to 23:59 on a certain day.

4.7.1.2 IF Received a Specific Message

A command containing this IF condition will be triggered by certain message defined by users.

IF Received an message containing

Only letter, number, comma, period, separator and exclamation mark are allowed, and the maximum character length is 60.

4.7.1.3 IF Digital Input

A command containing this IF condition will be triggered if the selected digital input changed according to the specified option.

If Digital Input1

is continued for 0 s

☐ Set lockout time

goes active (rising edge-triggered)
goes active (rising edge-triggered)
goes inactive (falling edge-triggered)
changes state(trigger on rising or falling edge)
is active (high level triggered)
is inactive (low level triggered)

The user can setup multiple combinations; however, digital input 1 be activated before action is taken.

Then the user can choose from the following options.

- Goes active (rising edge-triggered)
- Goes inactive (falling edge-triggered)
- Changes state (triggered on rising or falling edge)
- Is active (high level triggered)
- Is inactive (low level triggered)

Thus, if the user chooses "Goes Active", then as soon as the specified input changes from inactive to active, the command will be triggered. Also, it applies to the remaining options when the preset conditions are met.

The user is also able to specify a "Continued time" for this command, which will not be triggered until it remains Active or Inactive longer than the time specified. Moreover, the user can specify a "Lockout time" for this command. After the command has been triggered, it will not be allowed to be triggered again until the time specified has elapsed.

When you set the time, you can choose the time unit:

Msec: 0-86400000

sec: 0-86400

min: 0-1440

Only integers are allowed. You can't use the decimal point.

Note: There are 3 single actions at most to be executed for a single trigger condition.

4.7.1.4 IF Channel Input

A statement containing this IF condition will be triggered if the value of the channel meets the specified requirements.

If

is continued for

☒ Set lockout time

Then the user can choose from the following options (Type: Holding Register (INT16), Input Register (INT16), Holding Register (INT32) and Holding Register (Float):


- above
- below
- within

Thus, if the user chooses , then as soon as the value of this channel input goes above the specified threshold, the statement will be triggered.

Thus, if the user chooses , then as soon as the value of this channel input goes below the specified threshold, the statement will be triggered.

Thus, if the user chooses to , then as soon as the value of this channel input goes within the specified threshold, the statement will be


triggered.


If you select a "Lockout Time" of 10s, a "Continue Time" of 5s, and choose , the statement will be triggered as soon as the value of the selected channel input goes above 10, and remains above 10 for 5s. It will then start checking the value of the selected channel input again after 10s and be triggered once more if the value of the selected analog input is above 10 for 5s.

If the "Lockout Time" is 0, the statement will only be triggered once (will be triggered again when the trigger condition has changed and becomes true again).

Then the user can choose from the following options (Type: Coil, Discrete).


- True
- False

Thus, if the user chooses , then as soon as the value of this channel input is 1, the statement will be triggered.

Thus, if the user chooses , then as soon as the value of this channel input is 0, the statement will be triggered.

4.7.1.5 IF the Device Restarts



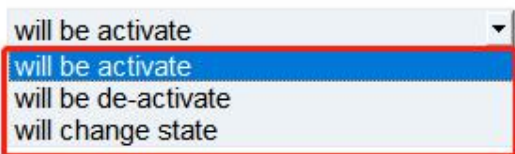
A command containing this IF condition will be triggered once the device has finished restarting.

IF 

4.7.2 Supported THEN Actions

4.7.2.1 THEN Change Output

A command containing this Action will change the selected output according to specified actions.

Then  Delay Time  

The user can choose from the following actions:

- Will be activated

- Will be deactivated
- Will follow the input: When the triggering condition is the Input changes state, you can then select change state as the action.

If Digital Input1 changes state(trigger on rising or falling edge)
 is continued for 0 s
☐ Set lockout time

Then Output1 will follow the input to change +

If the user has configured:

- "Delay Time", the selected output will be activated after the specified time.
- "Duration", the output will remain current status for a certain period of time.

4.7.2.2 THEN Send A Custom Message

A command containing this action will send a custom text message via LoRaWAN if the condition is met. Only letter, number, comma, period, separator, space and exclamation mark are allowed in the message, and the maximum character length is 60.


Then Send an custom message **content is** Only letter, number, comma, period, separator,blank and exclamation mark are allowed, and the maximum character length is 60.

4.7.2.3 THEN Restart the Device

A command containing this Action will restart the Ursalink UC1152 if the condition is met.

Then Restart the device

4.8 Upgrade

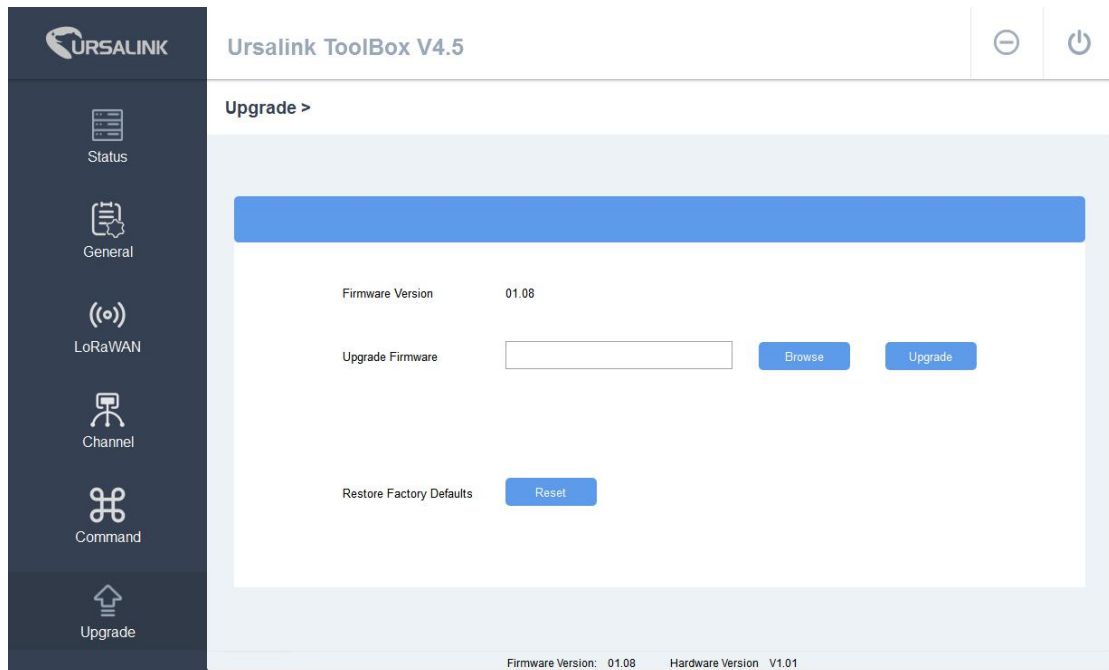

Step 1: Connect Ursalink UC1152 to PC via USB port.

Step 2: Power on the Ursalink UC1152.

Step 3: Run the Ursalink ToolBox and go to "Upgrade".

Step 4: Click "Browse" and select the correct firmware file from the PC.

Step 5: Click "Upgrade" and the device will check if the firmware file is correct. If it's correct, the firmware will be imported to the device, and the device will restart after upgrading is completed.

Note: Any operation on Ursalink ToolBox is not allowed during upgrading, otherwise the upgrading will be interrupted, or even the device will break down.

Click "Reset", and the device will restore to the factory default settings.

5. Application Examples

5.1 Periodic Status Report

Configuration:

Using the ToolBox, we create a behaviour statement that displays as follows:

If

Time

Monday

08:00

Then

Send a custom message

content is

trigger


The Ursalink UC1152 will send a custom message at 8 a.m. every Monday.

5.2 Control Appliances

5.2.1 Send an Alert When Channel Value Exceeds a Certain Threshold

Configuration:

Hardware:

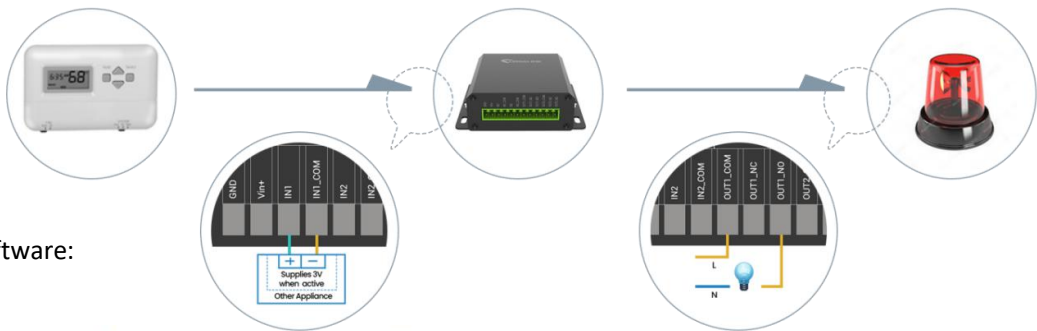

Software:

If

Channel

Tem

above

35

is continued for

0 s

☒ Set lockout time

0 s

Then

Output1

will be activate

Delay Time

0 s

Duration

0 s

-END-